


F. Caution:

Please keep the machine away from following conditions

- 1.High humidity and dusty.
- 2.Direct sunshine or beside the warmer or heater.
- 3.Unsteady table.

 If you face any problem, please contact Biosystem service centre.

G. Troubleshooting:

- 1.No power : be sure the plug and socket is proper connected
- 2.Printing is unclear: change ink roller or refill ink
- 3.If display reads E-2 or E-3:
 - (a) power off 
 - (b) press **C** continuously and power on at the same time
 - (c) the machine will reset automatically to normal condition




iCheque 5

iCheque 4

LEXUS

Dimensions: W125xH130xD253mm Weight: 1.9 kgs
Printing technology: impact by steel character wheel
Printing width: 15 digits © Operation condition: Temperature: 0-40°C, humidity: 20-80%RH
Power consumption: normal 1.5W (Maximum 30 W)
Voltage: AC110V 60HZ or AC220V 50HZ or AC240V 50HZ


 It is highly recommended to use genuine manufacturer cheque writer ink roller. Usage of non genuine or compatible ink roller may damage your printer head and void the machine warranty.

BIOSYSTEM

Instruction Manual



Operating Elements:

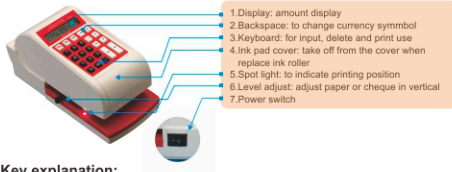

Key explanation:

 → Cheque Cancellation : press button 0 and followed by  , to void invalid amount printing

T.A. → Total Amount: press to display total amount of the cheque printed, when total amount is displayed, machine is out of function, press T.A. or any key to start again.

T.P. → Total Printing: press to display total number of the cheque printed, when total number is displayed, machine is out of function, press T.P. or any key to start again.

→ → Backspace: to change currency symbol

C → **C** : (1) Erase the numbers which is calculated
(2) Reset the display to 0
(3) If in "T.A." mode, press **C** to reset summary data.
(4) If in "T.P." mode, press **C** to reset the number of printing to zero.

P → **P** : Proceed to print

1 2 3 4 5 6 7 8 9 0 000 *

→ Press the keys to input required to numbers for cheque printing.

A. General

1.When switch on the machine, display screen shows 0, which means machine is stand by to use.



 
2.When the cheque is placed in the printing position, choose the correct currency, input amount and press button P, cheque will be auto clamped and printed by the machine.

B. Ink roller replacement:

- 1.Power off.
- 2.Take off cover.
- 3.Take away used ink roller, replace the new one.
- 4.Close back the cover.



C. LED light (iCheque 4, iCheque 5 only): LED light indicates printing position.



D. Set the printing position:

1. Insert the paper or cheque and adjust vertical and horizontal level.
2. Let spot light aim to the printing beginning line.
3. Input correct numbers.
4. Press P to print.



E. Attention:

1. Be sure to use proper voltage.
2. Do not power off or unplug when printing.
3. Do not operate printing function when no paper or cheque is inserted.
4. Please use original ink roller.
5. Please use soft cloth for cleaning.
6. No pulling the paper by force when printing.
7. Too thick paper is not acceptable.